

INSTRUCTION MANUAL

PAT.D123836 PAT.D123843

CROSS NEEDLE SWR & POWER METER



CN-801(a) Series HPTYPE. HP3TYPE. V TYPE. SII TYPE.




The CN-801@ Series is high quality Instrument with unique features which make tedious measurement of SWR and Power during antenna tests, matching and tuning of transmitters a very easy task, SWR and Power indicators are installed in one meter unit. One scale will indicate Forward Power. Another scale Reflected Power and SWR is indicated at the crossing point of the 2 needles. This unique feature makes it possible to read Forward Power, Reflected Power and SWR all at the same time. HP Type, HP3 Type can also measure P.E.P.(Peak Power in SSB operation.)


■ SPECIFICATIONS

	НР Туре	НРЗ Туре	V Туре	SII Type	
Frequency	※1.8∼ ∶	200MHz	140~525MHz	900~2500MHz	
Power range : Forward	20/200/2KW	30/300/3KW	20/200W	0.2/2/20W	
Tolerance	±10% at full scale				
SWR measurement	1:1~1∶∞				
SWR detection sensitivity	5W min			0.1W	
Input / Output impedance	50 ohms				
Input / Output connectors	МТ	ype	M or N Type	N Type	
DC Power supply	%DC13.8V (70mA)				
Dimensions and Weight	157 (W) ×117 (H) ×117 (D) mm,Approx 1Kg				

- Add 15% of full scale at 160-200MHz, Power Rating MAX 1kw(144MHz)
- **MP** type, **MP3** type, **SII** type: **DC** Power(13.8V) is necessary to operate.
- Meter light: ON/OFF Can be switched by light switch.


■ CONTROLES AND FUNCTIONS (CN-801HP)

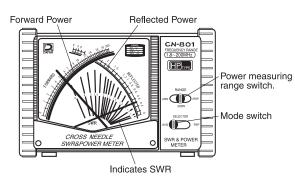

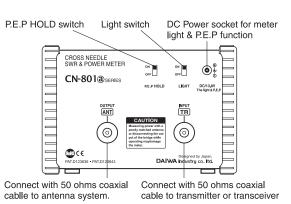

■ OPERATION

- 1. Use only 50 ohms coaxial line fo connections. This will maintain the accuracy of the meter.
- 2. For accurate power measurements, use 50 ohms pure resistance dummy load.(Fig.1)
- **※** [HP] type, [HP3] type, [SII] type : DC Power(13.8V) is necessary to operate.

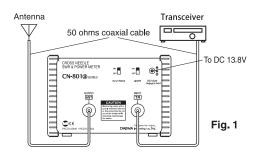

Effective Radiated Power & SWR.

Select the Mode switch to 「AVG」 position.

To measure effective radiated power, subtract reflected power from Forward Power (Apparent loss is only produced by impeda-nce mismatch and does not include cables losses.)

See Fig.2. The meter indicates Forward power 10W and Reflected power 0.4W. At the crossing point of the 2 needles the indication is SWR1.5.

4. P.E.P power (Turn Mode switch to [P.E.P] position.)

HP, HP3 type can also measure P.E.P Peak Power in SSB operation (can not measure Reflected Power range.)

※ If you would like to hold about P.E.P. Please Turn Switch to P.E.P hold (ON/OFF) on Back Panel.

V, SII type

When the transmitter is operated and the switch is in the 「P.E.P」 position the meter needle Monitor P.E.P of the SSB signal. This function can not hold peak envelope power.

Forward Power Reflected Power

Fig. 2

indicates SWR

Mathematical verification Rf: Forward Power Pr: Reflected Power

■ RF POWER FOR VARIOUS MODULATION MODES

(VOLTAGES SHOWN VARIOUS VOLTAGES FOR 50 OHMS DUMMY LOAD)

MODULA	Carrier Power (W)	Average Power (W)	PEP (W)	
AM/FM CARRIER	$\iiint \frac{\frac{1}{100}V}{\uparrow}$	100	100	100
AM Single Tone (100% modulation)	$\frac{1}{200}V$	100	150	400
SSB Single Tone Modulation	$\iiint \frac{\frac{1}{100}V}{\uparrow}$	_	100	100
SSB Two Tone Modulation	$\frac{100}{100}V$	_	50	100
SSB Voice Modulation	$\frac{1}{100}V$	_	20~50	100


During the various SSB transmission modes, as shown in the table left, the meter reading of AVG and P.E.P will differ. Therefore, when in the SSB transmit mode, befor switching the mode switch from AVG to P.E.P, make certain that the meter power setting is correct. Otherwise, the meter needle will go off-scale, resulting in damage to the instrument.

■ CAUTION

- 1. As the meter movements has high sensitivity, it should be handled with utmost attention. Prevent. mechanical shock and vibration.
- 2. Measuring power with a poorly matched antenna or disconnecting the out put of the bridge while operating maydamage the meter.
- 3. In low humidity conditions, the needles may stop on its way or may behave as though it cauaht on themeter face due to static electricity. In such case, apply commercially available static cream or spray for plastics or clothes on the meter face. The needles return to the origi-
- 4. Use only 50 ohms coaxial cable for connections. This will maintain the accuracy of the meter.



DAIWA INDUSTRY CO., LTD Foreign trade div. DAIWA BLD 3-7-10 Kashimada, Saiwai-ku, Kawasaki, Kanagawa 212-0058, Japan TEL: +81-44-396-0396 FAX: +81-44-396-2253 http://www.daiwa-industry.co.jp

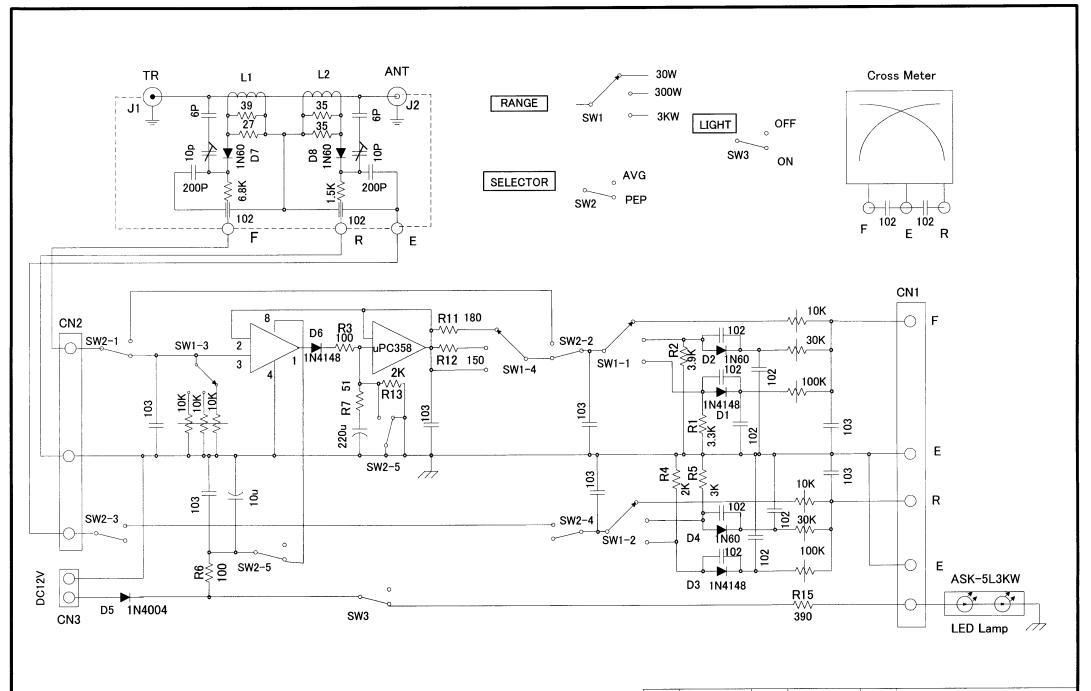

設計	丸山	日付	2011-6-17	名称	CN-801HP3
尺度				10 10	
				図番	